

Setting up your everyday fibre router




Use this guide to set up your everyday fibre router (NF18MESH)

NF18Mesh fibre router. If you need further help, call us on 0800 438 669

STEP 1: SETTING UP YOUR ONT

(The ONT is the little fibre box that's already on your wall. It might look like this)

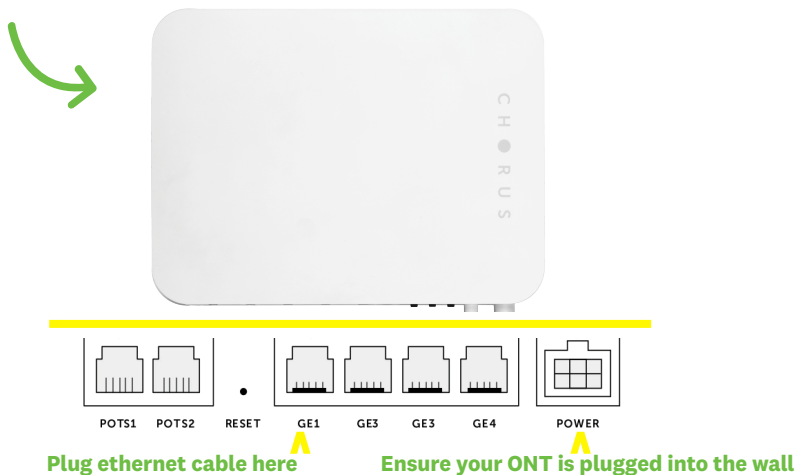

- Plug one end of the provided ethernet cable into either the **GE1** or **LAN1**, Ethernet port on your ONT. Plug the other end of the ethernet cable into
- **POTS1** supplies your phone line (if applicable). This is connected to either your phone or the back-feed jack point installed by the fibre technician.

STEP 2: CONNECTING TO ROUTER

- Plug the other end of the provided ethernet cable into the **WAN** port on your router. Make sure the other end is still in the **GE1** or **LAN1 ethernet** port (the GE1 or LAN1 ports may differ, give us a call if you need help with this) .

STEP 3: CONNECTING DEVICES

- Scan for wireless networks in your area, on your device, and connect to the network name that matches the wireless network name found on the sticker on the back of the router.
- When prompted for your wireless security settings, enter the wireless security key listed on the same sticker.

