


NOW NOKIA HA-140 QUICK START GUIDE



PACKAGE INCLUDES

- Nokia HA-140 Wi-Fi Gigabit router
- Power Adaptor
- 2 x Ethernet Cable (RJ-45) (blue and yellow)
- 2 x Line Cable (RJ-11)

STEP1: YOUR ONT SETUP

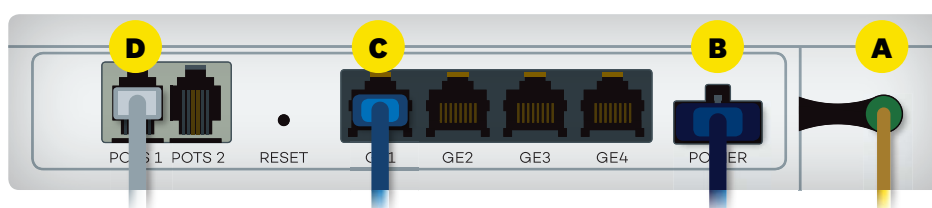

YOUR OPTICAL NETWORK TERMINAL

Your ONT (Optical Network Terminal) will have been installed on an internal wall by the fibre technician.

Connections A, B, C and D will have been made.


A Optical fibre connection.

B Power supply.

C Ethernet cable (blue) plugged into GE1 on your ONT, and connected to the WAN port on your router.

D POTS1 supplies your NOW phone line (if applicable). This is connected to either your phone or the back-feed jack point installed by the fibre technician.

STEP2: YOUR ROUTER SETUP

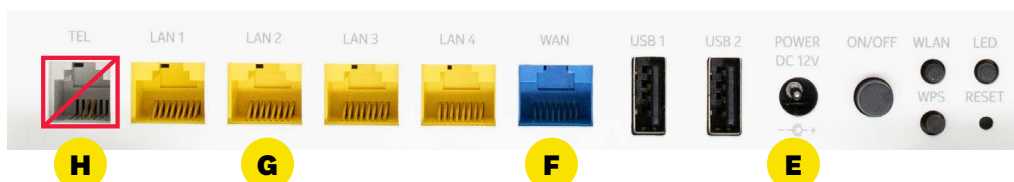

E Power supply.

F Ethernet cable plugged into WAN port on your router, and connected to GE1 on the ONT.

G Yellow Ethernet ports to connect your PCs and other network (yellow cable).

H The Phone1, Phone 2 and DSL ports are not used for a fibre connection.

CONNECTING YOUR WIRELESS DEVICES TO THE ROUTER

The router comes shipped with the wireless function enabled so there is no configuration necessary in order to use the wireless.

1. Ensure Wi-Fi is enabled on your device (eg. computer/smartphone/gaming console).
2. Scan for wireless networks in your area and connect to the network name that matches the wireless network name found on the base of your router.
3. When prompted for your wireless security settings, enter the wireless LAN key listed on the base of your router.

CHECK ON THE BASE OF ROUTER

Wireless Security Settings

Wireless Network Name (SSID)
SSID: Nokia HA-140

Wi-Fi Key
qv66rMU62T

0800 GET NOW

help@nownz.co.nz

