

## Netcomm NF15ACV Fibre configuration

### Logging into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.20.1**
4. Default Username: **admin**
5. Default Password: **admin**
6. This should then give access to the routers user interface.\*  
\*\* (If the password is incorrect you will need to Factory Reset the router by pushing the Inset Reset button on the back for 10 seconds) \*\*

### How to add correct settings for the NOW network:

1. From the menu on the left select: **WAN**
2. From the sub-menu select: **Ethernet WAN**

Ensure the following settings are changed:

1. Enable VLAN: **Unticked**
2. Channel Mode: **PPPoE**
3. Enable NAPT: **Ticked**
4. Enable QoS: **Ticked**
5. Admin Status: **Enable**
6. MTU: **1492**
7. Connection Type: **Internet**
8. IP Protocol: **IPv4**
9. PPP Username: (your NOW Account ID)**@nownz.co.nz**
10. PPP Password: **password**
11. Type: **Continuous**
12. Authentication Method: **Auto**
13. AC-Name: **(Left Blank)**
14. Service Name: **(Left Blank)**
15. Select: **Apply Changes**

You should now be connected to Fibre!

If your internet connection is still not working, give NOW Technical Support a call.



- Status
- ▶ Wizard
- ▶ LAN
- Wireless
- WAN
- ▶ Ethernet WAN
- ▶ VDSL WAN
- ADSL WAN
- ▶ DSL Settings
- Services
- VoIP
- Advanced
- Diagnostics
- Admin
- Statistics

### Ethernet WAN

This page is used to configure the parameters for Ethernet WAN of your Router.

nas0\_0 ▾

Enable VLAN:  VLAN ID:  802.1p\_Mark

Channel Mode: PPPoE ▾

Enable NAPT:  Enable QoS:   
MTU:(max: PPPoE 1492, IPoE 1500)  
1492

Admin Status:  Enable  Disable

Connection Type:  
INTERNET ▾

Enable IGMP:

IP Protocol: IPv4 ▾

PPP Settings: User Name: (Acc ID#)@nownz.co.nz Password:

Type: Continuous ▾ Idle Time (sec):

Authentication Method: AUTO ▾ AC-Name:

Service-Name: