

Spark Huawei HG630B VDSL configuration

Logging into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.1.254**
4. Default Username: **admin**
5. Default Password: **admin**
6. This should then give access to the routers user interface.*
** (If the password is incorrect you will need to Factory Reset the router by pushing the Inset Reset button on the back for 10 seconds) **

How to add correct settings for the NOW network:

1. From the menu on the left select: **Basic**
2. From the drop-down menu select: **WAN**
3. On the main page locate: **Spark_VDSL or TNZ_VDSL** and Select this option

Ensure the following settings are changed:

1. Wan Connection: **Ticked**
2. Service Type: tick **Internet (TR069 not ticked)**
3. Connection Type: **IP Routing (PPP)**
4. NAT Type: **NAPT**
5. Authentication Mode: **Auto**
6. Connection Trigger: **Always On**
7. Username: **(your NOW account ID)@nownz.co.nz**
8. Password: **password**
9. Click **Submit**
10. From the menu on the left select: **Link Interface**

On top of screen locate :

1. VLAN ID: **10**
2. 802.1P: **0**
3. Click **Submit**

You should now be connected to fibre!

If you have no internet access, give NOW Technical Support a call.



Spark HG630b Home Gateway

Setup Wizard Help Logout

Status Basic > WAN

WAN

Basic

Link Interface

Name	Connection Type	Connection Status	IP Version	Enabled	Remove
SPARK_ADSL	IP_Routed (PPP)	Disconnected		Enable	<input type="checkbox"/>
SPARK_VDSL	IP_Routed (PPP)	Connected	IPv4	Enable	<input checked="" type="checkbox"/>
SPARK_MOBILEBD	IP_Routed (PPP)	Disconnected		Enable	<input type="checkbox"/>
SPARK_FIBRE	IP_Routed (PPP)	PendingDisconnect		Enable	<input type="checkbox"/>

Advanced

Maintenance

SPARK_VDSL

WAN connection: Enabled

Service list: INTERNET TR069

Bind list: LAN1 LAN2 LAN3 LAN4
 SSID1 SSID2 SSID3 SSID4

Connection type: IP_Routed (PPP)

IP version: IPv4

NAT: NAT

Authentication mode: PAP

Connection trigger: AlwaysOn

User name:

Password:

Tunnel type: None

MRU: Auto Size: 1492

MSS: Auto Size: 1452

Copyright © Huawei Technologies Co., Ltd. 2014-2015. All rights reserved. Privacy Declare
 No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Spark HG630b Home Gateway

Setup Wizard Help Logout

Status Basic > Link Interface > VDSL

ADSL VDSL Fibre 3G

Basic

Link Interface

Name	DSL Latency	PTM Priority	VLAN ID	802.1P	Remove
SPARK_VDSL	Path0&1	Normal	10	0	<input checked="" type="checkbox"/>

Advanced

Maintenance

SPARK_VDSL

DSL latency: Path0 Path1

PTM priority: Normal Priority High Priority

VLAN: Enabled

VLAN ID: [1-4094]

802.1P: [0-7]

Submit