

## Spark Huawei HG659b Fibre configuration

### Logging into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.1.254**
4. Default Username: **admin**
5. Default Password: **admin**
6. This should then give access to the routers user interface.\*  
\*\* (If the password is incorrect you will need to Factory Reset the router by pushing the Inset Reset button on the back for 10 seconds) \*\*

### How to add correct settings for the NOW network:

1. From the menu along the top of page select: **Internet**
2. From the menu on the left select: **Internet Settings**
3. On the main page locate: **Spark\_Fibre or Internet\_TR069\_ETH\_VID10**
4. Beneath this option select: **Edit**

### Ensure the following settings are changed:

1. Enable Connection: **Ticked**
2. Service Type: tick **Internet (TR069 and Voice not ticked)**
3. Connection Type: **IP Routing (PPP)**
4. MRU: **1492**
5. MSS: **0**
6. NAT Type: **NAPT**
7. Enable VLAN: **Unticked**
8. PPP Authentication Mode: **Auto**
9. PPP Trigger Mode: Always **On**
10. Internet Account: **(your NOW account ID)@nownz.co.nz**
11. Internet Password: **password123**
12. PPP Service Name: **(Left Blank)**
13. IP Protocol Version: **IPV4**
14. Static DNS: **Unticked**

Click: **Save**

If you have no internet access, give NOW Technical Support a call.



**Basic Information**

Enable connection:

Name:

Service type:  INTERNET  TR069  VOICE  Other

Connection type:

MRU:

MSS:

NAT type:

**Link Information**

Enable VLAN:

VLAN ID:

802.1p:

**PPP Information**

PPP authentication mode:

PPP trigger mode:  Always online  Dial manually  Dial on demand

Internet account:

Internet password:

PPP service name:

**IP Information**

IP protocol version:

Static DNS: