

ASUS RT-AC66U Fibre Setup

Logging into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.1.1**
4. Default Username: **admin** (case sensitive)
5. Default Password: **admin** (case sensitive)

How to add correct settings for the NOW network:

1. From the menu on the left side select: **Advanced Settings**.
2. From the Advanced settings menu, select: **WAN**.

The WAN Internet Connection page displays.

Ensure the following settings are changed:

1. WAN Connection Type: **PPPoE**
2. Enable WAN select: **Yes**
3. Enable NAT select: **Yes**
4. Enable UPnP select: **Yes**
5. Get the WAN IP automatically select: **Yes**
6. Connect to DNS Server automatically select: **Yes**
7. PPP Username: **(your NOW account ID)@nownz.co.nz**
8. Password: **password123**
9. Disconnect after time of inactivity (in seconds): **0**
10. MTU: **1492**
11. MRU: **1492**
12. Service Name: **"Leave blank"**
13. Access Concentrator Name: **"Leave blank"**
14. Additional pppd options: **"Leave blank"**

Leave the Special Requirement from ISP as it is.

15. Click: **Apply**.

