

ASUS RT-N12 Fibre Setup

Logging into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.1.1**
4. Default Username: **admin** (case sensitive)
5. Default Password: **admin** (case sensitive)

How to add correct settings for the NOW network:

1. From the left menu select: **WAN**

The WAN - Internet Connection page displays.

Ensure the following settings are changed:

1. WAN Connection Type: **PPPoE**
2. Choose IPTV STB Port: **None**
3. Enable UPnP: **Yes**
4. Get the WAN IP automatically: **Yes**
5. Connect to DNS Server automatically: **Yes**
6. PPP Username: **(your NOW account ID)@nownz.co.nz**
7. Password: **password123**
8. Idle Disconnect Time in Seconds: **0**
9. MTU: **1492**
10. MRU: **1492**
11. Service Name: **Leave blank**
12. Access Concentrator Name: **Leave blank**
13. Additional pppd options: **Leave blank**
14. Enable PPPoE Relay: **Yes**

Leave the Special Requirement from ISP as it is.

15. Click: **Apply**

