

ASUS RT-N56U Fibre Setup

Logging into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.1.1**
4. Default Username: **admin** (case sensitive)
5. Default Password: **admin** (case sensitive)

How to add correct settings for the NOW network:

1. From the left menu select: **Advanced Setting**.
2. Click: **WAN**.

The Internet Connection page displays.

Ensure the following settings are changed:

1. WAN Connection Type: **PPPoE**
2. Enable UPnP: **Yes**
3. Enable PPPoE Relay: **No**
4. Get the WAN IP automatically: **Yes**
5. Connect to DNS Server automatically: **Yes**
6. PPP Username: **(your NOW account ID)@nownz.co.nz**
7. Password: **password**
8. MTU: **1492**
9. MRU: **1492**
10. Service Name: **Leave blank**
11. Access Concentrator Name: **Leave blank**
12. Additional pppd options: **Leave blank**

Leave the Special Requirement from ISP as it is.

13. Click: **Apply**.

