

Linksys X6200 Fibre configuration

Log into the gateway:

1. Ensure your device is connected to the Router (preferably via cable)
2. Open a web browser
3. Type the following in the address bar at the top: **192.168.1.1**
4. Default Username: **admin**
5. Default Password: **password**
6. This should then give access to the routers user interface. *
** (If the password is incorrect you will need to Factory Reset the router by pushing the Inset Reset button on the back for 10 seconds) **

How to add correct settings for the NOW network:

1. From top menu select: **Setup**
2. From the sub-menu select: **Basic Setup**
3. Ensure **Ethernet** is selected (this will reboot modem)
4. VLAN: **Unticked**
5. Internet Connection Type: **PPPoE**
6. Username: **(your NOW account ID)@nownz.co.nz**
7. Password: **Password**
8. Service Name: **(Left Blank)**
9. Keep Alive: **Ticked**
10. Optional Settings: **(Don't change)**
11. Router Address: **(Don't change)**
12. DHCP Server: **Enabled** (leave with default settings)
13. Timezone: **New Zealand** (bottom of list)
14. Select: **Save Settings** (from bottom of page, don't click Reboot)

Router will now reboot. Ensure the Ethernet cord from Fibre terminal installed in your home is plugged directly into Router

When it comes back online you'll be good to go! If not, give NOW Technical Support a call.



LINKSYS Firmware Version: v1.0.00 (014)

Linksys X6200 X6200

Basic Setup | **Setup** | Quick Start | Wireless | Security | Storage | Access Policy | Application & Gaming | Administration | Status

Basic Setup | IPv6 Setup | DDNS | MAC Address Clone | Advanced Routing

Language
Select your language: English

Physical Setting
Physical Type: DSL Ethernet

Internet Setup
Internet Connection Type: PPPoE

Username: (Account ID)@nownz.co.nz
Password: *****
Service Name (Optional):
 Connect on Demand: Max Idle Time 15 Minute.
 Keep Alive: Redial Period 30 Second.

Host Name: LINKSYS00048
Domain Name:
MTU: Auto Size: 1402

Network Setup
Router Address
IP Address: 192 . 168 . 1 . 1
Subnet Mask: 255.255.255.0
Device Name: LINKSYSX6200

DHCP Server Setting
DHCP Server: Enable Disable DHCP Relay
DHCP Relay Server: 0 . 0 . 0 . 0
IP Reservation
Start IP Address: 192.168.1.100
Maximum Number of Users: 50
IP Address Range: 192.168.1.100 to 149
Client Lease Time: 0 minutes (0 means one day)
WNS: 0 . 0 . 0 . 0

Time Settings
Time Zone: [(GMT+12:00) New Zealand]
 Automatically adjust clock for daylight saving changes.

Reboot
Reboot

Save Settings Cancel Changes